



# Tablet Touch Screen Replacement 10.1 Aoson

Learn to disarm and release the touch screen damaged, for replacement.

Written By: Fran Ruiz



## INTRODUCTION

Usual fall and break the touch screen of a tablet device, we learn to disarm and reach the Flex cable company to identify the reference number that appears and ask for a replacement for the replacement of the touch screen damaged.


---



### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
-

## Step 1 — Touch screen

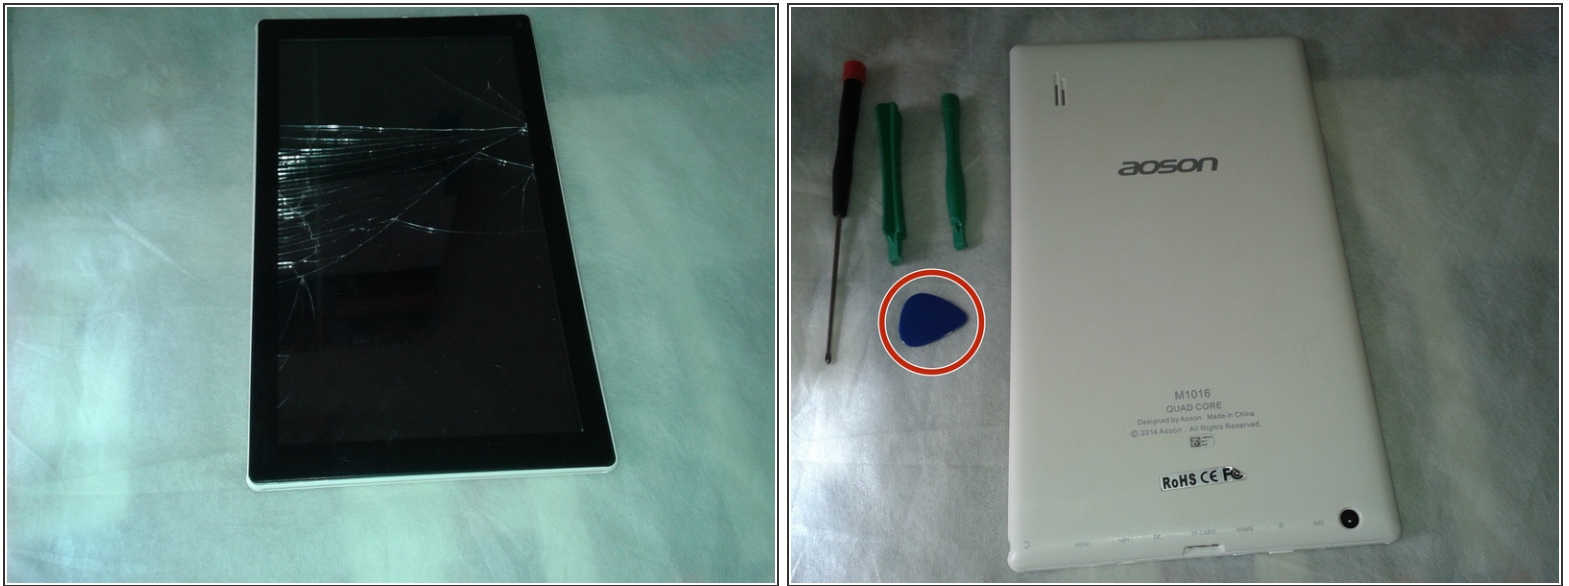

- We must use a plectrum I talk or if not available, we can serve a plastic card (credit card)


## Step 2

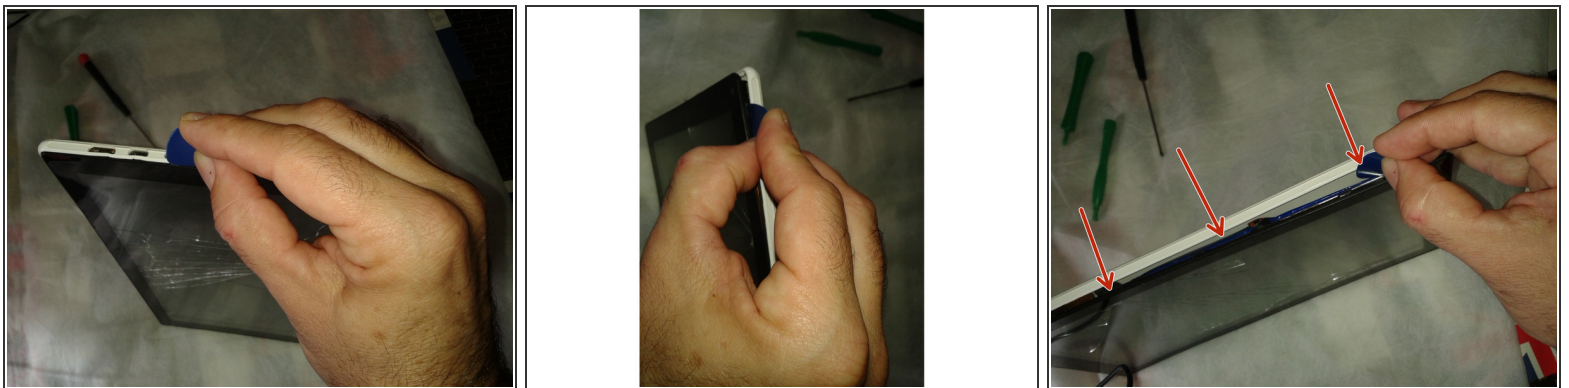

- Very quietly we inserting the spike and slowly making a slight pressure balanced while the spike, for the entire route of the housing tablet




## Step 3

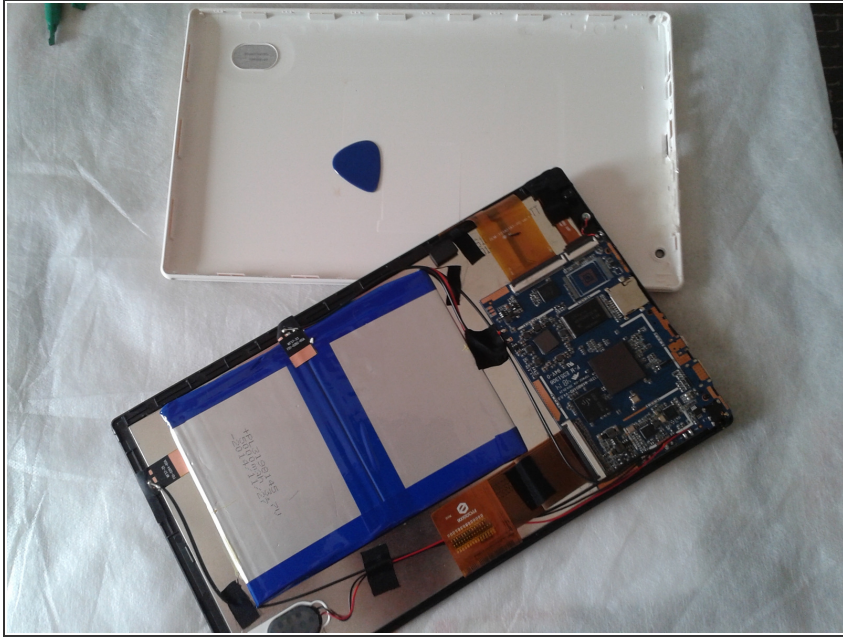


- carefully separated with the help of the fingers the back cover and support the tablet face down on a clean, flat surface

## Step 4

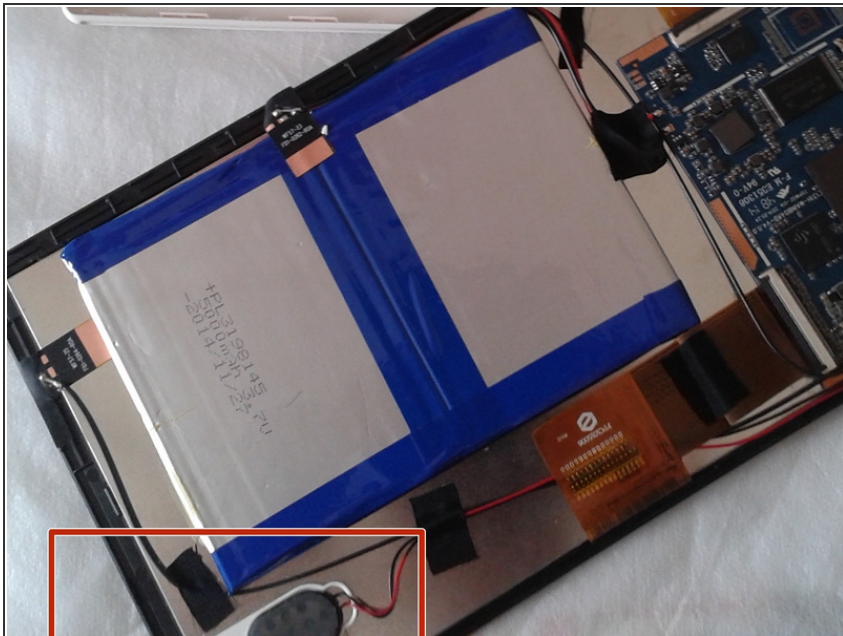


- the speaker of our tablet is bolted to the chassis along the touch, we must loosen the screw and place it in a visible place, the speaker will remain with tape with battery

## Step 5

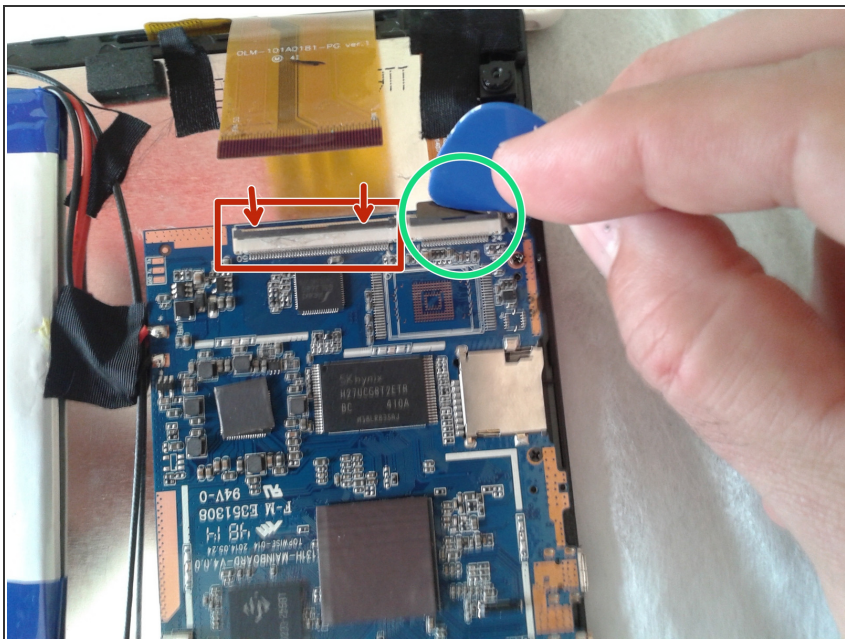

- with the help of the pua or fingers, we must drop the FLEX data connection, making a small upward pressure


## Step 6

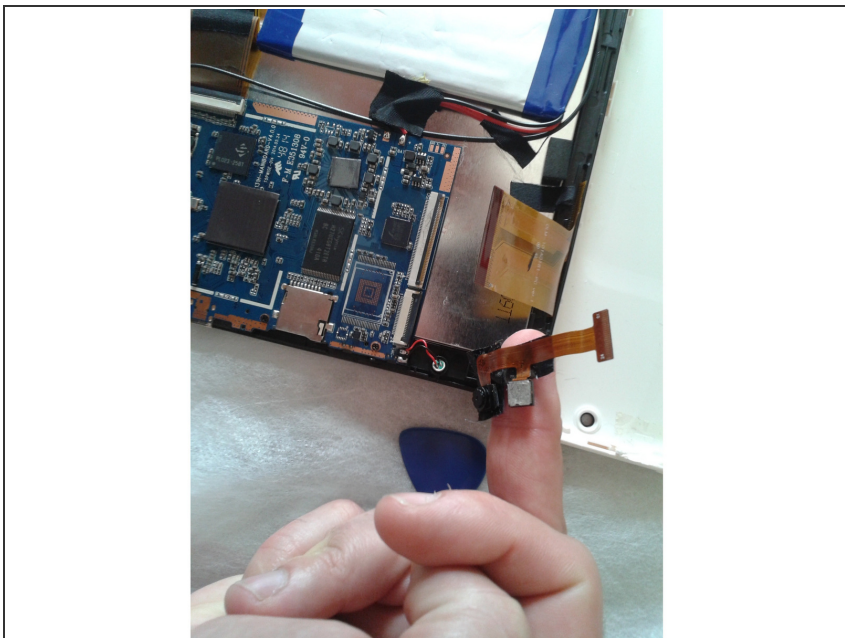

- care! FLEX cable connecting the front and rear camera, we let go completely, we must place it in a clean place for later assembly.





## Step 7

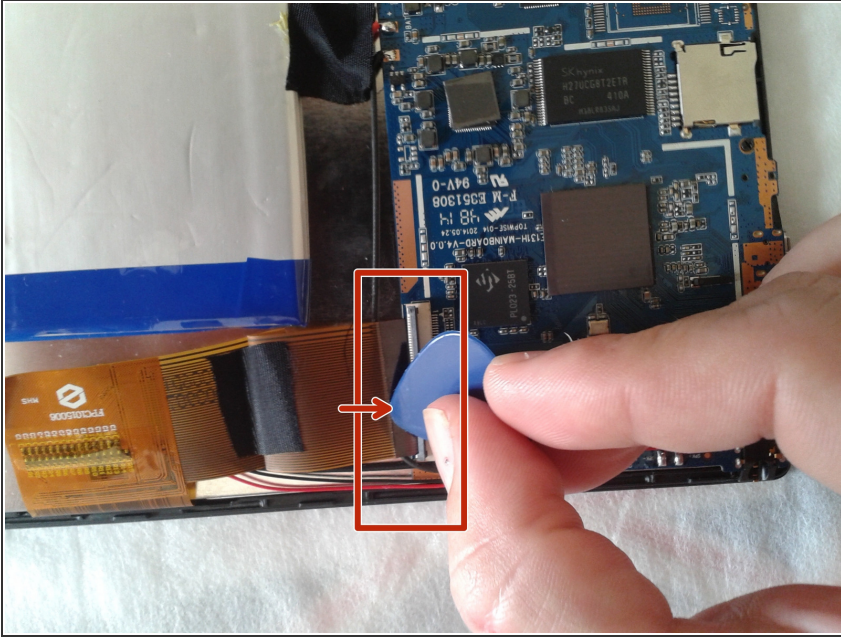


- we stay on the motherboard a third FLEX, we must do the same method press up on the connector until it is released, carefully FLEX these are easy to be able to break.

## Step 8

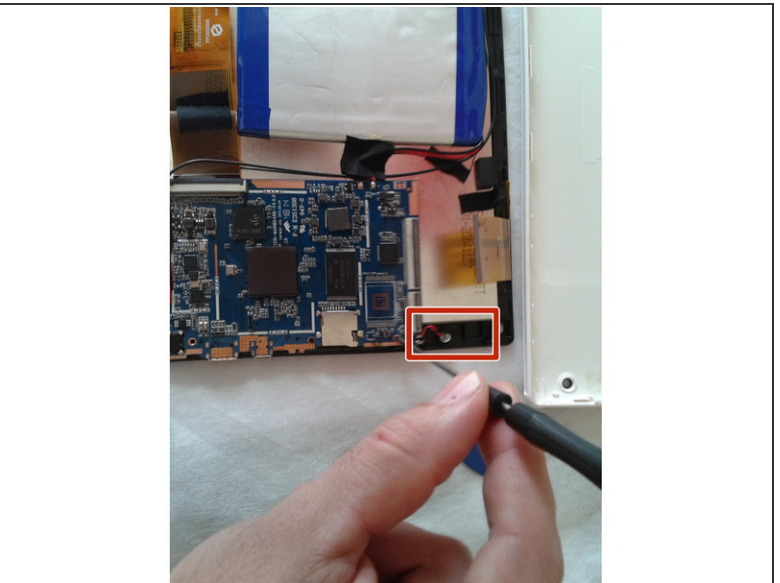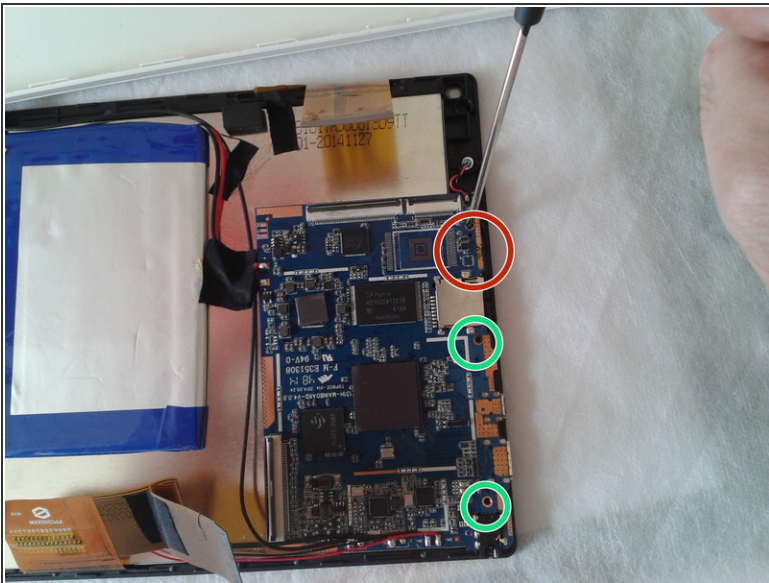

- Now with the help of a screwdriver philips, we must loosen the three screws holding the motherboard to the chassis of the touch screen, and the sensor with the positive and negative cables, we can help with fingers gently.

## Step 9

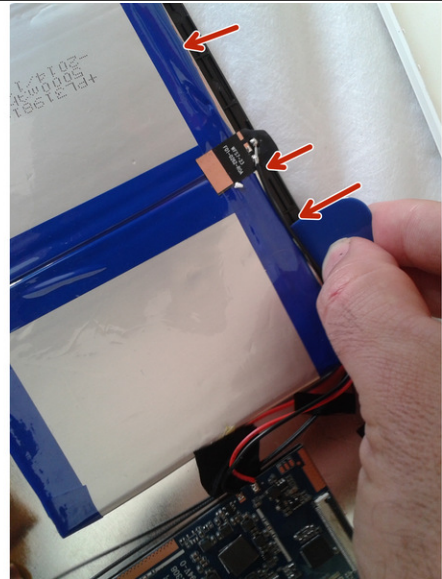

- Carefully, we have the release motherboard chassis touch, we look at the various faces that connect the touch screen with the LCD and the pick and roll we are doing little pressure to separate and LCD touch screen.

## Step 10



- with these steps and we loose our LCD screen and touch the chassis, now we must look for the number on the FLEX of our touch and our purchase reference parts will be easier to find a dealer who sells us the touch.

Para reensamblar tu dispositivo, sigue estas instrucciones en orden inverso.

